


EXPERT

Turkiye's First and Only Twin Motor Automatic Door System

KEYPAD

USER MANUEL

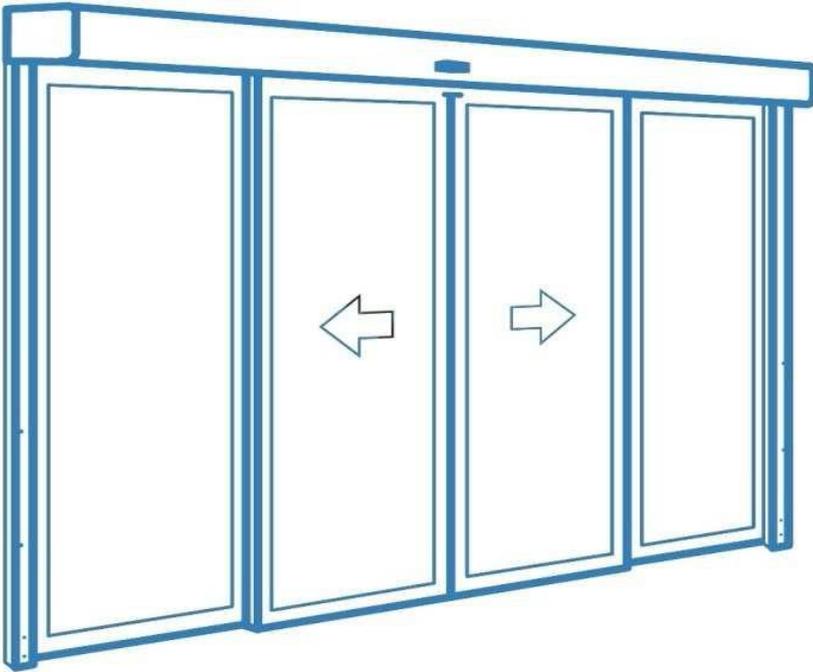

www.schmelz.com.tr

 **schmelz**
AUTOMATIC DOOR SYSTEMS

KEYPAD USER MANUEL



KEYPAD MAIN SCREEN USER MANUEL:

The keypad has been applied to prevent the unauthorized use of the location key. Press blue (minus) and green keys



1 time before doing the following. After pressing the keys at the same time, you will see that the symbols on the display flash. When the icons on the screen flash, the keys will be ready to issue commands for one person. When the icons are flashing, the following keys have the following functions;

- 1- The external radar is disabled when the red button  on the position key is pressed and a single arrow image is displayed as in the picture. When the red button is pressed again, a double arrow appears on the visual display and 2 radars are turned on.
- 2- The snowflake picture appears when the blue button  on the position key is pressed. The door is in winter mode. When the door is now opened,  it will be opened halfway in the direction determined by the user. When the same key is pressed again, the sun comes out and the door returns to normal operating mode. When the door is in normal operation mode, the door is closed.
- 3- When we press the blue button  on the position key, the door open sign appears  on the screen and the door moves to the open position. In the open position, the wings are released from the engine load
- 4- When the door is in the normal operation mode, the lock on sign is displayed. When we press the green button , the door switches to locked state . If present, the electromechanical lock is switched to the locked state.

KEYPAD OPTIONS MENU USER MANUEL:

The red menu key  on the location key and the green menu key  are same for 2 seconds. When held down, enters the setting menu, which is the service menu.

- 1- When you want to change the LANGUAGE option on the screen; The green menu key  is pressed once to blink the text on the screen. We can replace the blinking text with the plus  and minus  keys on the location key. When the desired option is reached, the green menu key  is pressed again and the desired selection is made. Press the plus key to switch to the next setting.
- 2- When prompted to change the OPENING SPEED on the screen; The green menu key  is pressed once to blink the text on the screen. We can replace the blinking text with the plus  and minus  keys on the location key. When the desired option is reached, the green menu key  is pressed again and the desired selection is made. Press the plus key to switch to the next setting.
- 3- When you want to change the CLOSING SPEED on the screen; The green menu key  is pressed once to blink the text on the screen. We can replace the blinking text with the plus  and minus  keys on the location key. When the desired option is reached, the green menu key  is pressed again and the desired selection is made. Press the plus key to switch to the next setting.
- 4- When you want to change the WAITING TIME on the screen; The green menu key  is pressed once to blink the text on the screen. We can replace the blinking text with the plus  and minus  keys on the location key. When the desired option is reached, the green menu key  is pressed again and the desired selection is made. Press the plus key to switch to the next setting.